



garden and landscaping products

Assembly Instructions

CWYE – Children's Picnic Table

List of parts in fixings pack

- 4 x 95mm Connecting Bolts**
- 4 x 60mm Connecting Bolts**
- 8 x 25mm Connecting Caps**
- 12 x 90mm Screws**
- 4 x 60mm Screws**
- 16 x Brass Caps for Screws**
- 2 x Allen keys**



When assembling, loosely bolt together until fully assembled then tighten all the bolts.

1. Place the table top upside down on a flat surface, taking care to protect the top from scratching.
2. Take 1 leg (the shortest length of timber) and slot between the 2 braces at one end of the table. Leg should be placed so it splays away from the table. Loosely bolt with one 95mm bolt and connecting cap. Then repeat this for the other 3 legs.
3. Next take the seat rails and bolt them to the inside of the legs using the 60mm bolts. At this point all the bolts can be tightened.
4. Finally the seat boards can be screwed down using 60mm screws at the chamfered (narrow) end on the seat rails. The other 12 holes each should be affixed to the deeper part of the seat rails using the 90mm screw and brass cap.

Hutton Garden and Landscaping Products

Church Lane, Northwood Green, Westbury-On-Severn, Gloucestershire GL14 1ND www.svw2000.co.uk/hutton

Tel: 01452 762089 Fax: 01452 762090 sales@hutton-ltd.co.uk